

# Table of Contents

<b>REF: General-MSR 08</b>	1
<b>TROUBLESHOOTING - Using Diagnostic Trouble Codes (DTC)</b>	1
<b><i>Diagnostic Trouble Codes - Overview &amp; WOW! Test</i></b>	1
<b><i>1998-2003 - Getting DTC Codes</i></b>	1
1998-2003 Sportster 1200S Only - CEL Diag Mode	2
<b><i>2004-2013 - Getting DTC Codes</i></b>	5
DTC Code List (2004-2013)	6
<b><i>2014-later - Getting DTC Codes</i></b>	10
DTC Code List (2014-later)	11
<b><i>Acronyms From Diag Code Explanations</i></b>	15



[Go To Technical Menu](#)

## REF: General-MSR 08

# TROUBLESHOOTING - Using Diagnostic Trouble Codes (DTC)

## Diagnostic Trouble Codes - Overview & WOW! Test

**1998-2003** Beginning in Late 1998, Sportsters have had an electronic diagnostic capability using the odometer display on the speedometer. Initially, L1998-2003 models had a simple diagnostic for the Speedometer signals including the VSS (Vehicle Speed Sensor).

**2004-later** In 2004 the computerization increased and there is now a long list of Diagnostic Troubleshooting Codes (DTC) available. These are recorded from information supplied by the individual control modules. These codes are accessible thru the odometer display on the speedometer.

**2004-later WOW! Test** - From the Electrical Diagnostic Manual:

Diagnostic Tip - For a quick check of speedometer function, a "WOW" test can be performed.

- Press and hold trip odometer reset switch, then turn Ignition Switch ON.
- Release trip odometer reset switch. Background lighting should illuminate, gauge needle should sweep its full range of motion, and indicator lamps (check engine, low fuel, battery and security) should illuminate.
- If instrument module fails "WOW" test, check for issues with battery & connections, system grounds, ignition switch & controls, trip odometer reset switch and accessory wiring to speedometer.

## 1998-2003 - Getting DTC Codes

### Using the Speedometer to Access the Diagnostic Mode

These diagnostic codes relate only to the Speedometer or the VSS (Vehicle Speed Sensor).

Using the Trip Odometer Reset Switch on the electronic speedometer (Late 1998 thru 2003 w/ 12-pin internal connector) - Press and hold the reset switch and turn the ignition from OFF to ON. Release the button. The normal power-up sequence will occur before entering the diagnostic mode. (Diagnostic codes set during this power-up sequence will be stored as well.)

Important Note: If the reset button is held for 5 seconds during any of the diagnostic displays, the code will be reset – So, be sure no diagnostic codes are indicated before reset is held in for more than 5 seconds or diagnostic information will be lost.

When in diagnostic mode the odometer will display the first diagnostic code. When the reset switch is briefly pressed again the next code will be shown. If the reset switch is pressed for more than 5 seconds at any time while in the diagnostic mode, the diagnostic code displayed will be cleared.

There are 7 different (active) diagnostic codes available. They are as follows:

- d01 - Speed sensor power output shorted low
- d02 - Speed sensor power output shorted high or open
- d03 - Not Used
- d04 - Not Used
- d05 - Speed sensor return shorted high
- d06 - Speed sensor return shorted low
- d07 - Not Used
- d08 - Speedometer power over voltage
- d09 - Speed output shorted high
- d10 - Speed output shorted low or open

CAL XX - Speedometer application calibration number:

14 = Domestic 15 = HDI

When in the diagnostic mode, the codes are displayed in sequence from d01 to d10. As a code appears in the display (for instance d02), it will read “d02Set” if set as an error or “d02CLr” if clear with no error.

The diagnostic mode is exited either by turning ignition from ON to OFF to ON again without depressing the reset switch or if a speed signal greater than 5 MPH is detected.

Diagnostics cannot be performed if system voltage is less than 9 VDC or greater than 16 VDC. The only exception is d08 which is set when system voltage is greater than 16 VDC.

After all the diagnostic codes are displayed, the speedometer calibration number is displayed (CAL 14 for example).

## 1998-2003 Sportster 1200S Only - CEL Diag Mode

### Using the Check Engine Light to Access Additional Diagnostic Codes <sup>1)</sup>

Place the RUN/STOP Switch in RUN Mode and turn the keyswitch to ignition - do not start the engine. Under normal circumstances, the Check Engine Light (CEL) will illuminate for 4-seconds, then turn off. If, after it is off for 4-seconds, the CEL illuminates again, a diagnostic trouble code exists. If the light goes out after another 8-seconds, the code stored is historic - if the CEL remains on, the code is current.

Reading 'between the lines', the ignition module does a system check during the 4-seconds that the CEL is initially illuminated. It may find a current diagnostic issue and set a code. If later, the trouble is

resolved by repair or was simply intermittent and that condition is no longer sensed, the previous Current code becomes stored as an Historic code. Once it is Historic, the CEL will not report it again, unless the issue occurs again as a Current problem. Historic codes do not activate the CEL indicator even though they are stored and can be retrieved (until the memory is cleared after 50 start events). Stored Functional codes are error codes 52-55 related to the ECM itself <sup>2)</sup>

<b>Typical CEL Function - Keyswitch = Ignition - RUN/STOP Switch = RUN</b>	
4-sec	CEL ON
+4-sec	CEL OFF
then	If the CEL remains off, checked systems are <b>NORMAL</b> no Current diag codes exist & no Functional codes are stored
+8-sec	CEL ON
then	If the CEL remains ON, a Current diag code exists
	If the CEL comes ON and then goes OFF, a stored Functional diag code exists
In all cases, Historic codes may exist but the CEL will not report them They can still be retrieved from memory until it is reset	

The 1200S has two ways of obtaining diagnostic codes thru the Data Link Controller (DLC) Bus.

- Use of a hand-held Scanalyzer unit (HD-41325) which reads diagnostic codes using the J1850 protocol
- By jumpering Pin1 & Pin2 of the DLC together to begin a diagnostic mode  
Then observe the CEL, which will blink to represent diagnostic codes.

Either method will obtain the diagnostic codes set in the ECM memory.

The list of possible codes (one or more) that might be set are listed below:

<b>1200S Diagnostic Codes</b>		
<b>Code</b>	<b>Related To:</b>	<b>Due to this Failure:</b>
12	MAP Sensor	If the MAP Sensor signal is out of range or fluctuates faster than normal operation
16	Battery Voltage	If the ignition module sees battery positive voltage less than +8v or greater than +16v
24	Front Coil	If the ignition coil voltage is out of range as sensed on the trigger signal line
25	Rear Coil	If the ignition coil voltage is out of range as sensed on the trigger signal line
35	Tachometer	If the PINK signal wire is shorted HI or LO
41	Cam Sync Failure	If, while running, the ECM receives no signal or an unexpected signal from the Cam Position Sensor
44	Bank Angle Sensor	If the voltage on the BAS Signal line is out of the normal operating range
52	RAM/ROM Failure	If the ECM RAM/ROM has an error*
54	EEPROM Failure	If the ECM EEPROM has an error*
55	ECM Module Failure	If the ECM Module fails/errors*
* These are Functional Diagnostic Error Codes		

## Using the DLC & CEL to Discover Diagnostic Codes

- To initiate the troubleshooting process, make and install a jumper wire across Pin1 and Pin2 of the DLC.
- Put the RUN/STOP switch in RUN mode - Turn the keyswitch to ignition
- Wait at least 8-seconds for the CEL to begin flashing

All diag codes will be represented with a series of blinks on the CEL. The CEL blinks will express all the two-digit codes stored and then the entire sequence will repeat itself. Record all the codes that are communicated. You will know you have gotten all the codes when you see the same code repeated (as the sequence begins its second round).

- At the beginning of the transmission of each stored two-digit diag code, there will be a rapid-flash episode, six flashes at 3 flashes per second.
- Then a 2-second pause will occur.
- The CEL will flash ON to indicate the first digit of the diag code being communicated. Each flash lasts about 1 second ON, then OFF for 1 second, for as many flashes as needed to represent the first digit.
- Then another 2-second pause between digits.
- The CEL will flash ON to indicate the second digit of the diag code - Each flash lasts about 1 second ON, then OFF for 1 second, for as many flashes as needed to represent the second digit.
- Then another 2-second pause.

**If more diag codes are stored**, the above sequence, starting with the rapid-flash episode, will repeat in exactly the same way, flashing the additional diag codes.

- Record all the codes that are communicated.
- You will know you have gotten all the codes when you see the same code.
- If you only see the rapid-flash episodes occur, then there are no stored codes to be communicated.

Be sure to turn the keyswitch to OFF and remove the DLC jumper wire when finished. If you do not remove the jumper, the next time you turn the keyswitch to ignition, even though the engine can start, the ignition module will remain in diagnostic mode and the speedometer CEL will begin & continue to display error codes, rather than operating normally.

Once you have made the repair, you should Reset the Diagnostic Code Memory.

## Resetting the Diagnostic Code Memory

In order to reset the diag code memory without the Scanalyzer, you must execute 50 start/run cycles.

Each cycle will consist of starting the engine, letting it run for a minimum of 30-seconds, then stop the engine for a minimum of 10-seconds.

Repeat this 50 times. (Note: If there are no additional Current codes set, this reset will naturally occur over the next 50 times you ride the bike)

The CEL should work as 'NORMAL' unless some current failure exists again.

## 2004-2013 - Getting DTC Codes

### Using the Speedometer to Access the Diagnostic Codes

To enter the diagnostic mode: Before turning on the key, set the Run/Stop switch to RUN.

Press and hold the reset button for the odometer (back of speedometer). While pressing the button, turn on the key switch. When the odometer shows 'diag', release the button.

Press the reset button once (briefly) and you will see 'PSSPt' displayed. The P,S,SP,t represent different diagnostic sections (for the responding electronic modules) as follows:

Code Section	Related to:
P	ECM/ICM (Electronic Control Module [EFI] Ignition Control Module [Carbureted])
S	TSM/TSSM (Turn Signal Module / Turn Signal w/Security Module)
SP	Speedometer (will display the speedometer model firmware information)
t	Tachometer (will display the tachometer model information) (Or 'No Rsp' if not present)

You can check each of the sections for diagnostic codes when the proper letter (such as 'P') is flashing. You can briefly press the reset button to change which section to examine (they sequence thru the list - P,S,SP,t,P again,etc.)

To access the diagnostic codes for a particular section, press and hold the reset button for 5 seconds while that letter is flashing. You will either see the first error code displayed or the word 'none' is displayed if no codes are set.

Repeatedly press the reset button (briefly) to scroll through multiple error codes. After the last error code in each particular section, the next press of the reset button will display the part number of the module reporting for that section, such as the part number of ICM/ECM.

Be sure to record all diagnostic error code(s) for later reference.

In order to delete an error code, press the reset button while the diagnostic code is showing and hold it for 5 seconds - THIS WILL DELETE THE CODE and display 'CLEAR' (be sure to have recorded the code beforehand).

Simply press the reset button repeatedly to scroll through any additional codes, to return to the section

list or to scroll thru additional sections.

When finished, turn the ignition switch to off to terminate the diagnostic mode.

“No Rsp” will appear if the run/off switch is in the OFF position when doing this procedure. On models not equipped with a tachometer “No Rsp” will appear when the tachometer identifier is selected.

## Historic Diagnostic Codes

Each DTC that occurs is tracked historically. After the DTC has been resolved, or if a particular problem happens to resolve itself, the status of the DTC is dropped from being current and it becomes a historic DTC. Historic DTCs are stored for 50 ignition cycles after any DTC was last set as current. This may assist in the diagnosis of intermittent faults. On the 50th cycle, the DTC will clear itself.

The check engine lamp will not indicate the existence of only historic DTCs. It is important to note that historic DTCs will exist whenever the system indicates the existence of a current fault.

NOTE: To determine if a code was stored historically or is a current error will require you to reset the error and check again - Clear the displayed code by pressing and holding the odometer reset button (longer than 5 seconds) until 'Clear' comes up. Release the odometer reset button. Turn OFF the ignition switch. Run your bike and shut it down then recheck the DTC's again as described above. If the code is current it will reappear. Historic codes can still be retrieved with computer-based diagnostic tools.

(See the list of DTCs below for individual error explanations.)

~~~~~  
~~~~~

## DTC Code List (2004-2013)

DTC's are designated by a preceding letter - B,P,U or C:

B codes are set by Instruments and the BCM or TSM/TSSM/HFSM

P codes indicate issues monitored by the ECM / ICM

U codes indicate a communication problem between control modules

C codes indicate an issue with the ABS

=====

### REPORTING MODULES

=====

ICM/ECM = Ignition Control Module / Engine Control Module

HFSM = Hands Free Security Module

TSSM = Turn Signal Security Module

TSM = Turn signal module

ABS = Antilock Braking System

Instruments = various sensors

=====

## DIAGNOSTIC TROUBLESHOOTING CODES



=====

Note: Not all codes will be used on every Sportster model and year  
(some may only be found on HD Touring models)

B0563 - Battery Voltage High (TSM/TSSM)  
B1004 - Fuel Level Sending Unit Low (Instruments)  
B1005 - Fuel Level Sending Unit High/Open (Instruments)  
B1006 - Accessory Line Overvoltage (Instruments)  
B1007 - Ignition Line Overvoltage (Instruments)  
B1008 - Reset Switch Closed (Instruments)  
B1121 - (TSM) Left Turn Output Fault - (HFSM) Left Turn Output Open  
B1122 - (TSM) Right Turn Output Fault - (HFSM) Right Turn Output Open  
B1123 - (HFSM) Left Turn Output Short to Ground  
B1124 - (HFSM) Right Turn Output Short to Ground  
B1125 - (HFSM) Left Turn Output Short to Battery  
B1126 - (HFSM) Right Turn Output Short to Battery  
B1131 - Alarm Output Low (TSM/TSSM / HFSM)  
B1132 - Alarm Output High (TSM/TSSM / HFSM)  
B1134 - Starter Output High (TSM/TSSM)  
B1135 - Accelerometer Fault (TSM/TSSM)  
B1136 - (HFSM) Accelerometer Tip Test Error  
B1141 - (TSM) Ignition Switch Low/Open - (HFSM) Ignition Switch Low/Open  
B1142 - Smart Security System Internal Fault  
B1143 - (HFSM) Security Antenna Short to Ground  
B1144 - (HFSM) Security Antenna Short to Battery  
B1145 - (HFSM) Security Antenna Open  
B1151 - Bank Angle Sensor(BAS) Short to Ground  
B1152 - Bank Angle Sensor(BAS) Short to Battery  
B1153 - Bank Angle Sensor(BAS) High  
B1154 - Clutch Switch Input Short to Ground  
B1155 - Neutral Switch Input Short to Battery

P0106 - MAP Sensor Rate of Range Error (Carb)  
P0107 - Map Sensor Failed Open/Low  
P0108 - Map Sensor Failed High  
P0112 - IAT Sensor Voltage Low (EFI)  
P0113 - IAT Sensor Voltage Open/High (EFI)  
P0117 - ET Sensor Voltage Low  
P0118 - ET Sensor Voltage Open/High  
P0120 - TPS1 Range Error  
P0122 - TP Sensor Open/Low  
P0123 - TP Sensor High  
P0131 - Front Oxygen Sensor Low  
P0132 - Front Oxygen Sensor High  
P0134 - Front Oxygen Sensor Inactive  
P0151 - Rear Oxygen Sensor Low  
P0152 - Rear Oxygen Sensor High  
P0154 - Rear Oxygen Sensor Inactive

P0220 - TPS2 Range Error  
P0222 - TPS2 Low  
P0223 - TPS2 High/Open  
P0261 - Front Injector Open/Low  
P0262 - Front Injector High (EFI)  
P0263 - Rear Injector Open/Low (EFI)  
P0264 - Rear Injector High (EFI)  
P0371 - Crank Position Sensor (CKP)  
P0372 - Crank Position Sensor (CKP)  
P0373 - CKP Sensor Intermittent  
P0374 - CKP Sensor Not Detected (Carb)  
P0374 - CKP Sensor Synch Error (EFI)  
P0444 - Purge Solenoid Open/Low  
P0445 - Purge Solenoid High  
P0501 - VSS Sensor Low  
P0502 - VSS High/Open  
P0505 - Loss of Idle Sped Control EFI  
P0562 - Battery Voltage Low  
P0563 - Battery Voltage High  
P0572 - Brake Switch Low  
P0577 - Cruise Control Input High  
P0602 - Calibration Memory Error (Carb)  
P0603 - ECM EEPROM Memory Error  
P0604 - RAM Failure (Carb)  
P0605 - ECM FLASH Memory Error  
P0607 - Converter Error Carb  
P0641 - 5v+ Vref 1 Out Of Range  
P0651 - 5v+ Vref 2 Out Of Range  
P1001 - System Relay Coil Open/Low  
P1002 - System Relay Coil High/Shorted  
P1003 - System relay contacts open  
P1004 - System Relay Contacts Closed  
P1009 - Incorrect Password  
P1010 - Missing Password  
P1270 - TGS Validation Error  
P1351 - Front Ignition Coil Driver Open/Low  
P1352 - Front Ignition Coil Driver High/Shorted  
P1353 - Front Cylinder No Combustion  
P1354 - Rear Ignition Coil Driver Open/Low  
P1355 - Rear Ignition Coil Driver High/Shorted  
P1356 - Rear Cylinder No Combustion  
P1357 - Front Cylinder Combustion Intermittent  
P1358 - Rear Cylinder Combustion Intermittent  
P1475 - Exhaust Actuation Position Error  
P1477 - Exhaust Actuator Open/Low  
P1478 - Exhaust Actuator Shorted/High  
P1501 - Jiffy Stand Sensor Low  
P1502 - Jiffy Stand Sensor High

P1510 - EFI Limited Performance Mode  
P1511 - EFI Power Management Mode  
P1512 - EFI Forced Idle Mode  
P1514 - Air Flow Fault  
P1600 - EFI Module Processor Internal Error  
P2100 - EFI Motor Circuit Open  
P2101 - EFI Motor Circuit Range Performance (Actuation Error)  
P2102 - EFI Motor Circuit Low  
P2103 - EFI Motor Circuit High  
P2105 - EFI Forced engine shutdown  
P2107 - EFI Module Processor Internal Fault  
P2119 - EFI Motor Throttle Body Range Performance  
P2122 - TGS1 Low/Open  
P2123 - TGS1 High  
P2127 - TGS2 Low/Open  
P2128 - TGS2 High  
P2135 - TPS Correlation Error  
P2138 - TGS Correlation Error (Twist grip sensor)  
P2176 - EFI Closed Position Not Learned

U1016 - Loss of ECM Vehicle Speed, Vehicle Inhibit Motion  
——— or Powertrain Security Status (ICM/ECM / TSM/TSSM / Instruments)  
U1064 - Loss of TSM/FSFM Serial Data (ICM / ECM / Instruments)  
U1097 - Loss of Speedometer Serial data (Carb / EFI / ECM / TSM/TSSM)  
U1255 - Serial Data Error/Missing Message (EFI / TSM/TSSM / Instruments)  
U1300 - Serial Data Low (ECM / TSM/TSSM / Instruments)  
U1301 - Serial Data Open/High (Carb / EFI / TSM/TSSM / Instruments)

BUS Er - Serial data bus shorted/low/open/high

C0562 - ABS voltage low  
C0563 - ABS voltage high  
C1014 - ABS ECU relay error  
C1021 - ABS front WSS always zero  
C1023 - ABS rear WSS always zero  
C1025 - ABS Front wheel speed intermittent  
C1027 - ABS rear wheel speed intermittent  
C1029 - ABS wheel speed difference too high  
C1032 - ABS Front wheel speed circuit open/shorted  
C1034 - ABS rear wheel speed circuit open/shorted  
C1040 - ABS pump/motor error  
C1055 - ABS ECU internal error  
C1061 - ABS front apply solenoid circuit open/high resistance  
C1062 - ABS front release solenoid circuit open/high resistance  
C1065 - ABS rear apply solenoid circuit open/high resistance  
C1066 - ABS rear release solenoid circuit open/high resistance  
C1071 - Rear prime valve error

C1072 - Rear isolation valve error  
C1073 - Front isolation valve error  
C1074 - Front prime valve error  
C1075 - Front linked inlet valve error  
C1076 - Front linked outlet valve error  
C1077 - Front circuit pressure sensor error  
C1078 - Rear circuit pressure sensor error  
C1081 - Front master pressure sensor error  
C1082 - Front master pressure sensor offset error  
C1083 - Front wheel pressure sensor error  
C1084 - Front wheel pressure sensor offset error  
C1085 - Rear master pressure sensor error  
C1086 - Rear master pressure offset sensor error  
C1087 - Rear wheel pressure sensor error  
C1088 - Rear wheel pressure sensor offset error  
C1089 - Pressure sensor external supply error  
C1159 - ABS invalid stored VIN  
C1178 - ABS no VIN received from ECM  
C1184 - ABS invalid VIN from ECM  
C1195 - Wake up error

## 2014-later - Getting DTC Codes

### Using the Speedometer to Access the Diagnostic Codes

To enter the diagnostic mode: Before turning on the key, press and hold the trip button for the odometer (on the left handlebar). While pressing the button, turn on the key switch. When the odometer shows 'diag', release the button.

There are multiple sections to the diagnostic mode that will display in sequence:

Code Section	Related To:
ECM	Electronic Control Module
BCM	Body Control Module
SPDO	Speedometer
ABS	AntiLock Braking System (if present)

Press the trip button briefly in order to scroll through the various sections.

If a section has a display of 'Y' next to its name (such as 'ECM Y') that section has a diagnostic code present. To display the diagnostic code(s) in that section, press and hold the trip button for 5 seconds. The first diagnostic code will be displayed. If there are no codes in that section (no Y next to the section name), you will see a display of 'none'.

Repeatedly press the trip button (briefly) to scroll through multiple error codes until you reach the display of 'END'. After the 'END' display in each particular section, the next press of the trip button will display the part number of the module reporting for that section, such as the part number for the ECM / BCM / Speedo / ABS control module.

Be sure to record all diagnostic error code(s) for later reference.

In order to delete an error code, press the trip button while the diagnostic code is showing and hold it for 5 seconds - THIS WILL DELETE THE CODE and display 'CLEAR' (be sure to have recorded the code beforehand).

Simply press the trip button repeatedly to scroll through any additional codes, to return to the section list or to scroll thru additional sections.

When finished, turn the ignition switch to off to terminate the diagnostic mode.

### Historic Diagnostic Codes

Each DTC that occurs is tracked historically. After the DTC has been resolved, or if a particular problem happens to resolve itself, the status of the DTC is dropped from being current and it becomes a historic DTC. Historic DTCs are stored for 50 ignition cycles after any DTC was last set as current. This may assist in the diagnosis of intermittent faults. On the 50th cycle, the DTC will clear itself.

The check engine lamp will not indicate the existence of only historic DTCs. It is important to note that historic DTCs will exist whenever the system indicates the existence of a current fault.

NOTE: To determine if a code was stored historically or is a current error will require you to reset the error and check again - Clear the displayed code by pressing and holding the odometer reset button (longer than 5 seconds) until 'Clear' comes up. Release the odometer reset button. Turn OFF the ignition switch. Run your bike and shut it down then recheck the DTC's again as described above. If the code is current it will reappear. Historic codes can still be retrieved with computer-based diagnostic tools.

(See the list of DTCs below for individual error explanations.)

~~~~~  
~~~~~

### DTC Code List (2014-later)

DTC's are designated by a preceding letter - B,P,U or C:

B codes are set by Instruments and the BCM

P codes indicate issues monitored by the ECM

U codes indicate a communication problem between control modules

C codes indicate an issue with the ABS

#### 2014 Diagnostic Trouble Codes List (List compiled from the 2014 Model)

DTC# - Diagnostic Trouble Code # Reported

Res# - Resolution Order # - Resolve lower numbers first

## Fault Condition - being reported

DTC#	Res#	Fault Condition
B1103	30	LHCM internal error
B1153	29	RHCM internal error
B1200	19	Internal fault
B1212	145	Fuel signal low
B1213	146	Fuel signal high
B2102	31	System poweroutput shorted high
B2103	32	System power output shorted low
B2104	39	System power output overloaded
B2106	225	BCM Pin-L4 (Frt Lights) output open
B2107	193	BCM Pin-L4 (Frt Lights) output shorted high
B2108	194	BCM Pin-L4 (Frt Lights) output shorted low
B2109	195	BCM Pin-L4 (Frt Lights) output overloaded
B2112	109	ACC output shorted high
B2113	111	ACC output shorted low
B2114	113	ACC output overloaded
B2116	78	Fuel pump output open
B2117	79	Fuel pump output shorted high
B2118	80	Fuel pump output shorted low
B2119	81	Fuel pump output overloaded
B2121	43	Starter output open
B2122	44	Starter output shorted high
B2123	45	Starter output shorted low
B2124	46	Starter output overloaded
B2127	211	BCM Pin-E4 (Horn) output shorted high
B2128	212	BCM Pin-E4 (Horn) output shorted low
B2129	213	BCM Pin-E4 (Horn) output overloaded
B2131	201	High beam output open
B2132	202	High beam output shorted high
B2133	203	High beam output shorted low
B2134	204	High beam output overloaded
B2136	197	Low beam output open
B2137	198	Low beam output shorted high
B2138	199	Low beam output shorted low
B2139	200	Low beam output overloaded
B2141	175	Left front turn signal output open
B2143	182	Left front turn signal output shorted low
B2144	183	Left front turn signal output overloaded
B2146	184	Right front turn signal output open
B2148	185	Right front turn signal output shorted low
B2149	186	Right front turn signal output overloaded

DTC#	Res#	Fault Condition
B2151	187	Left rear turn signal output open
B2153	188	Left rear turn signal output shorted low
B2154	189	Left rear turn signal output overloaded
B2156	190	Right rear turn signal output open
B2158	191	Right rear turn signal output shorted low
B2159	192	Right rear turn signal output overloaded
B2161	166	Brake lamp output open
B2163	167	Brake lamp output shorted low
B2164	168	Brake lamp output overloaded
B2168	142	Running lights output shorted low
B2169	143	Running lights output over- loaded
B2172	205	BCM Pin-H2 (Siren) output shorted high
B2173	206	BCM Pin-H2 (Siren) output shorted low
B2176	207	Security antenna output open
B2177	208	Security antenna output shorted high
B2178	209	Security antenna output shorted low
B2183	219	N/A - Ignore - BCM Pin-G2 output shorted low
B2188	222	N/A - Ignore - BCM Pin-G3 output shorted low
B2193	224	N/A - Ignore - BCM Pin-H4 output shorted low
B2198	227	N/A - Ignore - BCM Pin-H3 output shorted low
B2201	37	IGN switch off w/VSS
B2203	35	Ignition switch input shorted low
B2206	36	Run/stop switch input open/shorted high
B2208	38	Run/stop switch input shorted low
B2210	40	Run/stop switch inputs both open
B2212	41	Run/stop switch inputs both closed
B2218	108	Neutral switch shorted low
B2223	165	Rear brake switch shorted low (light on)
B2250	107	Clutch switch stuck
B2251	210	Horn switch stuck
B2253	196	FTP (Flash-to-Pass) switch stuck
B2254	171	Left turn switch stuck
B2255	214	Trip switch stuck
B2260	42	Start switch stuck
B2261	172	Right turn switch stuck
B2262	164	Front brake switch stuck
B2263	170	Hazard switch stuck
B2270	12	BCM internal error
B2271	11	BCM voltage low
B2272	16	BCM voltage high
B2274	34	Constant battery line error
.	.	.

<b>DTC#</b>	<b>Res#</b>	<b>Fault Condition</b>
<b>DTC#</b>	<b>Res#</b>	<b>Fault Condition</b>
P0031	124	Front HO2S low/open
P0032	127	Front HO2S shorted/high
P0051	125	Rear HO2S low/open
P0052	126	Rear HO2S shorted/high
P0107	86	MAP sensor failed low/open
P0108	87	MAP sensor failed high/open port
P0112	102	IAT sensor shorted low
P0113	104	IAT sensor high/open
P0117	88	ET sensor shorted low
P0118	91	ET sensor high/open
P0122	60	TPS 1 low/open
P0123	61	TPS 1 high
P0131	128	O2 sensor low/engine lean (front)
P0132	130	Engine running rich (front)
P0134	132	Oxygen sensor high/open (front)
P0151	129	O2 sensor low/engine lean (rear)
P0152	131	Engine running rich (rear)
P0154	133	O2 sensor high/open (rear)
P0261	82	Fuel injector low/open (front)
P0262	83	Fuel injector shorted high (front)
P0264	84	Fuel injector low/open (rear)
P0265	85	Fuel injector shorted high (rear)
P0371	50	CKP sensor wrong number of pulses
P0374	49	CKP sensor no pulses
P0502	114	VSS failed low
P0503	115	VSS failed high
P0506	103	Idle speed control - rpm too low
P0507	105	Idle speed control - rpm too high
P0562	106	ECM voltage low
P0603	14	ECM EEPROM memory error
P0605	13	ECM FLASH memory error
P0641	47	5 Volt reference out of range
P1009	15	VTD disabled fuel due to bad password
P1353	116	No combustion detected (front)
P1356	117	No combustion detected (rear)
P1501	140	JSS low
P1502	141	JSS high/open
P1608	33	Loss of continuous battery
P2300	74	Ignition coil driver low/open (front)
P2301	75	Ignition coil driver shorted high (front)
P2303	76	Ignition coil driver low/open (rear)



DTC#	Res#	Fault Condition
P2304	77	Ignition coil driver shorted high (rear)
.	.	.
DTC#	Res#	Fault Condition
U0001	1	CAN BUS error
U0002	10	CAN comm bus perf error
U0100	3	Lost comm w/ECM
U0121	7	Lost comm w/ABS
U0140	2	Lost comm w/BCM
U0141	5	Lost comm w/LHCM
U0142	4	Lost comm w/RHCM
U0156	6	Lost comm w/speedo
.	.	.
DTC#	Res#	Fault Condition
C0562	20	ABS voltage low
C0563	22	ABS voltage high
C1014	151	ABS ECU relay error
C1021	159	ABS front WSS always zero
C1023	160	ABS rear WSS always zero
C1025	162	ABS front wheel speed intermittent
C1027	163	ABS rearwheel speed intermittent
C1029	161	ABS wheel speed difference too high
C1032	157	ABS front wheel speed circuit open/shorted
C1034	158	ABS rear wheel speed circuit open/shorted
C1040	152	ABS pump/motor error
C1055	21	ABS ECU internal error
C1061	153	ABS front apply solenoid circuit open/high resistance
C1062	155	ABS front release solenoid circuit open/high resistance
C1065	154	ABS rear apply solenoid circuit open/high
C1066	156	ABS rear release solenoid circuit open/high
C1159	27	ABS invalid stored VIN
C1178	25	ABS no VIN received from ECM
C1184	26	ABS invalid VIN from ECM

## Acronyms From Diag Code Explanations

ABS - Anti-lock Brake System

AFR - Air Fuel Ratio

ATS - Air Temperature Sensor

BAS - Bank Angle Sensor

CCM - Cruise Control Module

CKP - Crank Position Sensor. The CKP generates an "AC signal" which is sent to \_\_\_\_\_ the ECM where it is used to reference engine position (TDC) and speed.

DTC - Diagnostic Trouble Codes

ECM - Electronic Control Module. (The Computer) Computes the spark advance  
——— for proper ignition timing and fuel control based on sensor inputs  
——— (from CKP, MAP & TP sensors) and controls the low-voltage circuits  
——— for the ignition coils and injectors. The dwell time for the ignition  
——— coil is also calculated in the microprocessor and is dependent upon  
——— battery voltage. The programmed dwell feature gives adequate spark at  
——— all speeds.

ECT - Engine Coolant Temperature. Sensor also controls the cooling fan relay  
that

——— provides 12 Vdc to the fans.

EFI - Electronic Fuel Injection

EFP - Electronic Fuel Pump

ET/ETS - Engine Temperature sensor

FI — Fuel Injectors

FPR - Fuel Pressure regulator

FTP - Flash-To-Pass Switch

H02S - Heated Oxygen Sensor (in exhaust pipe)

IAC - Idle Air Control actuator

IAT - Intake Air Temperature sensor

ICM - Ignition Control Module (The Computer - used on carbureted models)

ISS - Ion Sensing System...detonation detection

JSS - Jiffy Stand Sensor

LHCM - Left Hand Control Module

MAP - Manifold Absolute Pressure sensor. The MAP sensor monitors the intake  
——— manifold pressure (vacuum) and sends the information to the ECM.

——— The ECM then adjusts the spark and fuel-timing advance curves for  
——— optimum performance.

O2 — Oxygen Sensor

RHCM - Right Hand Control Module

TGS - Twist grip sensor

TPS - Throttle Position Sensor

TSM/TSSM - (Turn Signal Module / Turn Signal w/Security Module)

VE — Volume Efficiency

VSS - Vehicle Speed Sensor

[Go To Technical Menu](#)

1)

1998 Sportster Service Manual 99484-98

2)

Buell 99/00 Lightning X1 Manual - 99490-00Y

From:

<http://www.sportsterpedia.com/> - **Sportsterpedia**

Permanent link:

<http://www.sportsterpedia.com/doku.php/techtalk:ref:genmsr08>

Last update: **2022/05/19 03:31**

