

**ELECTRIC STARTER WARNING**

Prevent any possible personal injury because of accidental starter operation while the primary chain compartment is open for service of any kind.

DISCONNECT BATTERY POSITIVE CABLE before removing chain cover!

This is of special importance on the Electra-Glide Model where any movement of the solenoid shift lever will close the starter motor circuit and rotate the pinion and clutch ring gear (if battery remains connected). This warning is prominently shown on Page 42 of the Electra-Glide Handbook.

Play safe by disconnecting the battery before performing service on electric start models.

HARLEY-DAVIDSON MOTOR CO.