


[illegible]

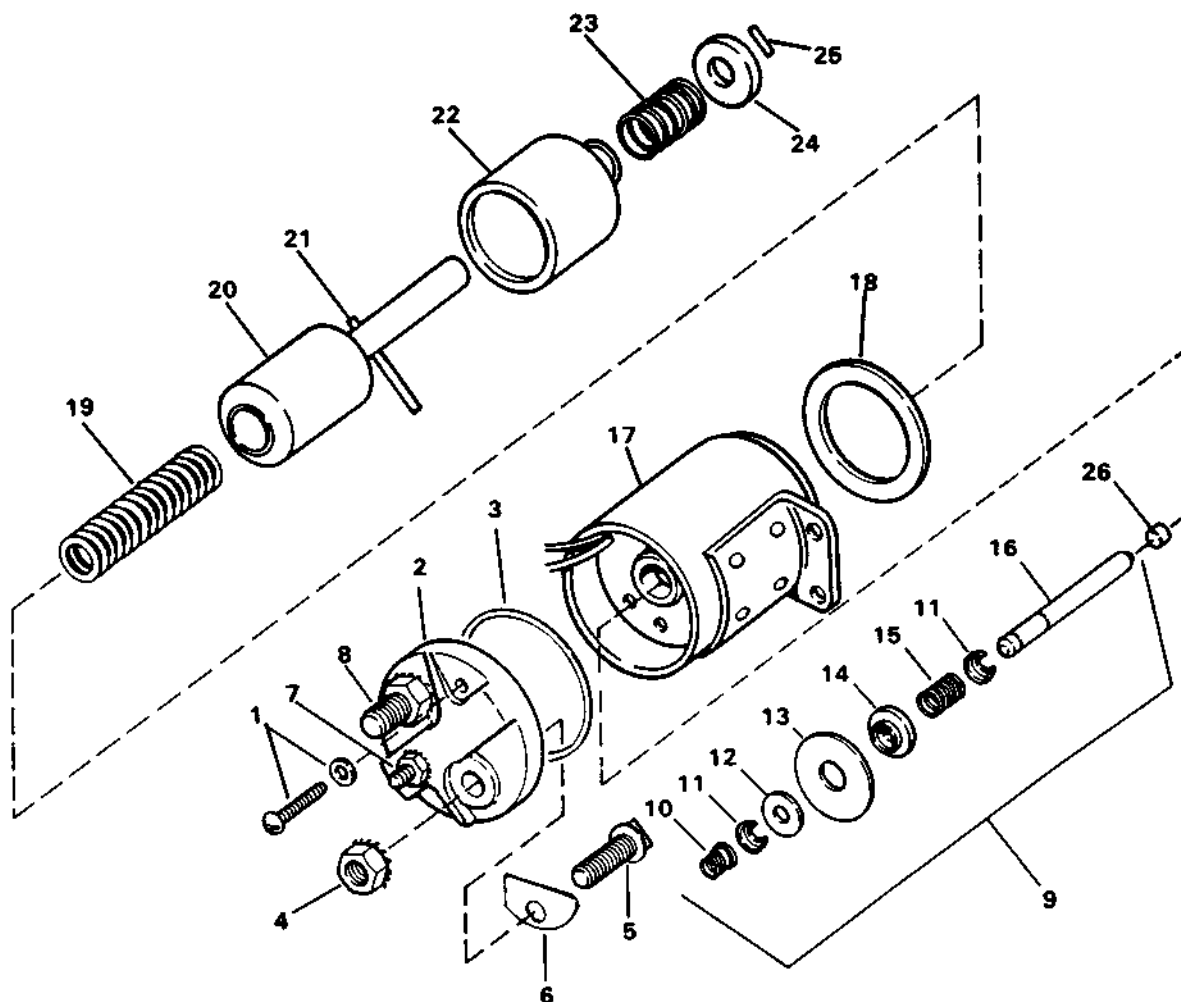

- | | |
|------------------------------------|-----------------------|
| 1. Screw and washer (2) | 14. Seat |
| 2. Cover | 15. Spring (large) |
| 3. Gasket | 16. Plunger |
| 4. Nut and gasket (3) | 17. Solenoid |
| 5. Stud (positive battery) | 18. Felt gasket |
| 6. Plate | 19. Spring |
| 7. Stud (starter relay) | 20. Plunger (outer) |
| 8. Stud (starter motor connection) | 21. Pin (large) |
| 9. Plunger assembly (inner) | 22. Rubber boot |
| 10. Spring (small) | 23. Spring |
| 11. Collar (2) | 24. Collar |
| 12. Plastic washer | 25. Pin (small) |
| 13. Copper washer | 26. Spacer (FXB only) |

Figure 2. Solenoid — Exploded View