

## **Instructions for setting V-Rod Model clocks**

### **SETTING THE CLOCK:**

#### **2005 and 2006 VRSCSE (No 12/24 hour clock option)**

**Clock set button is located just aft of the horn below the left side frame rail.**

1. Turn the ignition switch ON.
2. Press and hold the clock-set button for five seconds until the last digit of the minutes display on the clock begins to blink. Release the button.
3. Press and release the clock-set button repeatedly to advance the last digit of the minutes display. Each time you press and release the button, the display will advance one minute.
4. When the correct minute is displayed, press and hold the clock-set button for five seconds, the minutes display will switch to the first digit of the minutes display.
5. Press and release the clock-set button repeatedly to advance the first digit of the minutes display. Each time you press and release the button, the display will advance one minute.
6. When the correct minute is displayed, press and hold the clock-set button for five seconds, the minutes display will switch to the hours display (both digits).
7. Press and release the clock-set button repeatedly to advance the hours display. Each time you press and release the button, the display will advance one hour.
8. When the correct hour is displayed, press and hold the clock-set button for five seconds, then release. The hours display will stop blinking, indicating that the clock has been set.
9. Turn the ignition switch OFF.

**SETTING THE CLOCK:**

**2006 VRSCA, VRSCD, 2006 VRSCR**

Post 2006 model launch

First launch of 2006 VRSCR (2005.5) model does not have clock feature

**Has 12/24 hour clock option.**

**Clock set button is the same button used to re-set odometer and change odometer modes.**

1. Turn the ignition switch ON.
2. Press and hold the clock-set button for five seconds until 12HR on the clock begins to blink. Release the button.
3. Press and release the clock-set button one time to advance to 24HR or military style time display. Each time you press and release the button, the display will switch between 12HR and 24HR.
4. When the desired style is displayed, press and hold the clock-set button for five seconds, the display will switch to the hours display.
5. Press and release the clock-set button repeatedly to advance the hours. Each time you press and release the button, the display will advance one hour.
6. When the correct hour is displayed, press and hold the clock-set button for five seconds, the hours display will switch to the minutes display.
7. Press and release the clock-set button repeatedly to advance the minutes display. Each time you press and release the button, the display will advance one minute.
8. When the correct minutes are displayed, press and hold the clock-set button for five seconds, then release. The minutes display will stop blinking, indicating that the clock has been set.
9. Turn the ignition switch OFF.