


Rear Wheel Compensator Sprocket Bearing Remover/Installer (HD-48921)

The rear wheel sprocket bearing remover/installer tool is not listed in the 2008 VRSC Service Manual (99201-08).

This tool is used for compensator sprocket bearing replacement on 2004 - present XL Models (Japan only), all 2002 -present VRSC, and all 2008- present Touring Models. Additionally it is used on 2007 Touring Models which have had P&A kit number 40287-07 installed.

For proper use of the tool please refer to the Instruction sheet for the tool, which can be found on the SPX Tool Site, accessed from h-dnet.com > Service Toolbox. For isolated drive system information, please refer to I-sheet –J04467, which can be found using Service Document Viewer in the Service Toolbox of h-dnet.com.

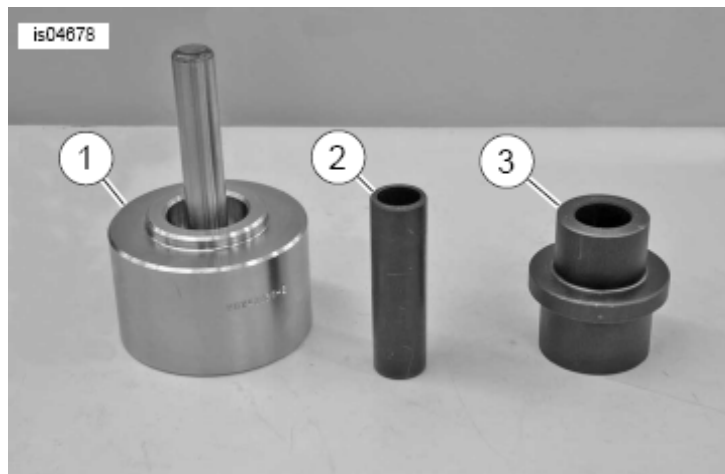

Rear Wheel Compensator Sprocket Bearing Remover/Installer (HD-48921)

HOME | TERMS & POLICIES | WARRANTY | CONTACT US VIEW ORDER

HARLEY-DAVIDSON MOTOR CYCLES **Buell AMERICAN MOTORCYCLES** **SPECIAL SERVICE TOOLS** **SPX KENT-MOORE**

Click to View Search Options ▾
 Tool Number

- DIGITAL TECHNICIAN II**
- TOOL STORAGE**
- V-TWIN TOOLS**
- V-ROD TOOLS**
- BUELL TOOLS**
- INFORMATION**
 - NEW DEALER KIT
 - SPX CREDIT APPLICATION
 - BULLETINS
 - INSTRUCTION SHEETS
 - 2006/2007 CATALOG
- PROMOTIONS**
- RETAIL TOOLS**

Instruction Sheets

B-41175	REAR SWINGARM BEARING ADJUSTMENT TOOL
B-41178-A	REAR SHOCK COMPRESSOR ADAPTER
B-41623-B	OIL LINE REMOVER TOOL
B-42079	CALIPER PISTON REMOVAL TOOL
B-42571	FORK SEAL DRIVER AND DUST BOOT INSTALLER
B-43721	FORK SEAL DRIVER
B-43895	REAR SHOCK SPANNER WRENCH
B-43982	SPROCKET LOCKING TOOL
B-43983	MAIN DRIVE GEAR REMOVER CROSS PLATE
B-43985	TRANSMISSION REMOVAL & INSTALLATION TOOL
B-43991	FORK SEAL DRIVER
B-43993-50A	WHEEL BEARING REMOVAL/INSTALLER KIT
B-44623	ISOLATOR REPLACEMENT TOOL
B-45110	REAR SHOCK SPANNER WRENCH
B-45520	GEAR DETENT ASSEMBLY AID
B-45522	FUEL PRESSURE GAUGE ADAPTER

Screen shot of SPX Tool Site