



INSTRUCTIONS

-J00052

REV. 12-1-84

Kit Numbers 29188-85, 29255-78, 29259-83A, and 29288-83

CARBURETOR AIR FILTER ELEMENT

General

This is a plastic foam air filter element which requires an oil wet surface to function properly. This kit contains the following parts:

ITEM	QTY	DESCRIPTION
1	1	Filter element

Installation

NOTE

If filter element is supplied dry, it must be oiled before installation on engine.

1. Remove element from screen.
2. Evenly apply 1 to 1 1/2 Tablespoons of engine oil as recommended for engine crankcase. Apply oil to element liberally, working in with hands and fingers until element is uniform in color indicating uniform saturation.
3. Replace element on screen and re-install on engine.

CAUTION

Do not run engine without filter element in place.

Service Instructions

1. Inspect filter element every 2500 miles or more often under dusty conditions.

NOTE

The need for servicing is indicated by the appearance of the outside surface of the filter. Filter should be cleaned and re-oiled if a film of dirt has built up covering the surface pores, or if light spots show on the surface which means that dust is drying out the oil. A dark appearance is normal, as long as pores in the filter remain open and covered with an oil film.

2. Remove filter element from screen and wash in a non-flammable petroleum product or detergent and water.
3. Allow element to dry thoroughly.
4. Re-oil element per Steps 2 and 3 under Installation.



INSTRUCTIONS

-J00052

REV. 12-1-84

Kit Numbers 29188-85, 29255-78, 29259-83A, and 29288-83

CARBURETOR AIR FILTER ELEMENT

General

This is a plastic foam air filter element which requires an oil wet surface to function properly. This kit contains the following parts:

ITEM	QTY	DESCRIPTION
1	1	Filter element

Installation

NOTE

If filter element is supplied dry, it must be oiled before installation on engine.

1. Remove element from screen.
2. Evenly apply 1 to 1 1/2 Tablespoons of engine oil as recommended for engine crankcase. Apply oil to element liberally, working in with hands and fingers until element is uniform in color indicating uniform saturation.
3. Replace element on screen and re-install on engine.

CAUTION

Do not run engine without filter element in place.

Service Instructions

1. Inspect filter element every 2500 miles or more often under dusty conditions.

NOTE

The need for servicing is indicated by the appearance of the outside surface of the filter. Filter should be cleaned and re-oiled if a film of dirt has built up covering the surface pores, or if light spots show on the surface which means that dust is drying out the oil. A dark appearance is normal, as long as pores in the filter remain open and covered with an oil film.

2. Remove filter element from screen and wash in a non-flammable petroleum product or detergent and water.
3. Allow element to dry thoroughly.
4. Re-oil element per Steps 2 and 3 under Installation.