



# INSTRUCTIONS

-J02494

2009-04-06

## REAR SPROCKET COVER KIT

### GENERAL

#### Kit Number

91746-03, 40124-10

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Additional Parts Required

Separate purchase of LOCTITE® 262 Threadlocker and Sealant (Red) (94759-99) is required for proper installation of this kit. LOCTITE can be purchased from any Harley-Davidson Dealer.

#### ⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

#### NOTE

This instruction sheet references service manual information. A service manual for your model motorcycle is required for this installation and is available from a Harley-Davidson Dealer.

#### Kit Contents

There are no Service Parts available with this kit.

### REMOVAL

#### ⚠ WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, disconnect negative (-) battery cable before proceeding. (00048a)

#### ⚠ WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)

1. Disconnect the negative (-) battery cable or remove the main fuse, following the instructions in the service manual.
2. Remove rear wheel following the instructions in the service manual.
3. See Figure 1. Remove the five sprocket mounting screws.

### INSTALLATION

1. Apply a small amount of LOCTITE 262 Threadlocker and Sealant to each screw before installing.

#### NOTE

If replacing the original equipment sprocket mounting screws with Chrome Hardware Kit (94708-98), refer to that kit for the correct LOCTITE Threadlocker and Sealant and torque values.

2. Position the sprocket cover over the sprocket. Install the sprocket cover screw removed earlier.
3. Tighten screws to the torque value in the service manual.
4. Install the rear wheel following the instructions in the service manual.
5. Connect the battery negative (-) cable or install the main fuse following the instructions in the service manual.

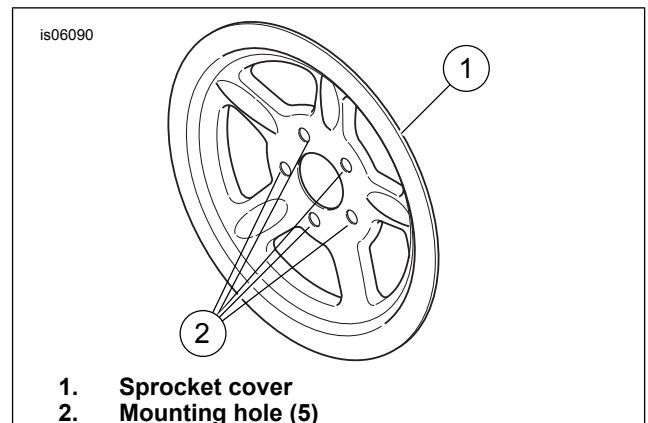


Figure 1. Chrome Sprocket Cover