

Service Tool Instructions

REV. 09-15-2003

Instruction Sheet ID: -J03049

HD-46282 FINAL DRIVE SPROCKET HOLDING TOOL

General

These instructions describe how to use the FINAL DRIVE SPROCKET HOLDING TOOL (Part No. HD-46282) to remove and install the final drive sprocket on the following models:


All 1991 and later Sportster models.

NOTE

A Service Manual for your model motorcycle is available from your Harley-Davidson Dealer.

Usage

- See Figure 1. Unthread adjustment screw (3) several turns. Loosen shoulder bolts (4) just enough so that sprocket holder plate (2) slides smoothly on sprocket holder/handle (1).
- 2. See Figure 2. Holding tool attaches to final drive sprocket as shown.
 - a. Slide tool onto sprocket.
 - Tighten adjustment screw (item 3, Figure 1.) only enough to clamp tool squarely to sprocket. Do NOT overtighten adjustment screw.
 - Tighten shoulder bolts (item 4, Figure 1.) firmly to lock tool in place.

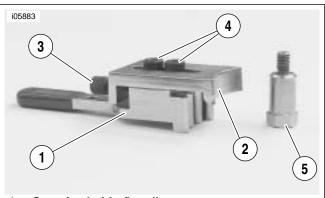

- 1. Sprocket holder/handle
- 2. Sprocket holder plate
- 3. Screw
- 4. Shoulder bolt (2)
- 5. Reaction adapter

Figure 1. Final Drive Sprocket Holding Tool


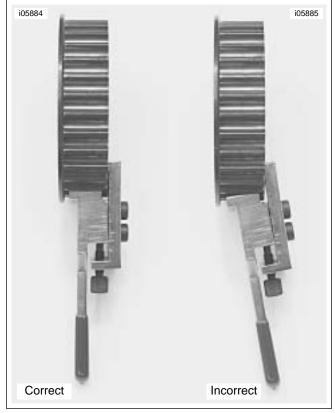


Figure 2. Attaching Holding Tool to Final Drive Sprocket

Removal

- Shift transmission into neutral.
- 2. Remove the following items as described in the service
 - Rear muffler and rear exhaust pipe
 - Sprocket cover
 - Rear drive belt
- 3. See Figure 3. Remove screw and washer (6) from exhaust interconnect bracket.
- Remove two screws (5) and lockplate (4).

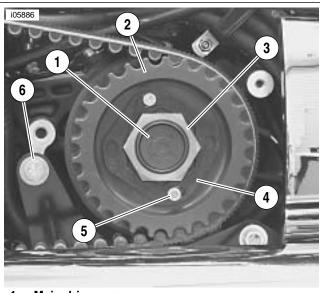


- Main drive gear
- **Transmission sprocket** 2.
- 3. Transmission sprocket nut
- 4. Lockplate
- 5. Screw (2)
- 6. Screw and washer

Figure 3. Transmission Sprocket Assembly


See Figure 4. Use TRANSMISSION SPROCKET HOLD-ING TOOL (Part No. HD-46282) (1), MAINSHAFT LOCKNUT WRENCH (Part No. HD-46288) (2), and a breaker bar (3) to remove transmission sprocket nut (left-hand threads). Place handle of sprocket holding tool under bottom of footpeg bracket. Turn nut clockwise to loosen and remove it.

On models without rear footpegs, screw reaction adapter (Part No. HD-46282-1) into either rear footpeg bracket hole in frame. Place handle of tool underneath adapter.

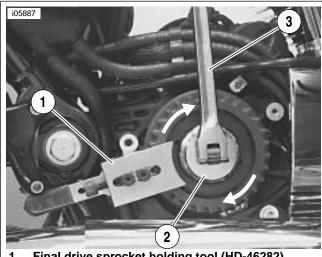

- Final drive sprocket holding tool (HD-46282)
- Mainshaft locknut wrench (HD-46288)
- Breaker bar

Figure 4. Removing Transmission Locknut

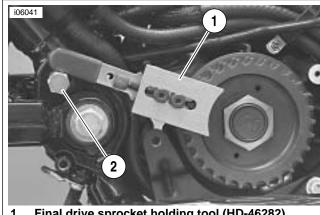

- Final drive sprocket holding tool (HD-46282)
- Adapter (HD-46282-1)

Figure 5. Using Holding Tool with Adapter (Arrangement for Tightening Sprocket Nut Shown)


Installation

- 1. See Figure 3. Install transmission sprocket (2) onto main drive gear (1).
- Shift transmission into neutral. Apply a few drops of LOCTITE THREADLOCKER 262 (red) to the left-hand threads of transmission sprocket nut (3). Position nut with washer-faced side facing transmission sprocket. Turn the nut counterclockwise to install it onto main drive gear.
 - a. See Figure 6. Use TRANSMISSION SPROCKET HOLDING TOOL (Part No. HD-46282) (1), MAIN-SHAFT LOCKNUT WRENCH (Part No. HD-46288) (2), and a torque wrench (3). Place handle of sprocket holding tool on top of footpeg bracket.

NOTE


On models without rear footpegs, screw reaction adapter (Part No. HD-46282-1) into either rear footpeg bracket hole in frame. Place handle of tool on top of adapter.

- b. See Figure 3. Tighten sprocket nut (3) according to the procedure described in the service manual.
- Install lock plate (4) over nut and tighten screws (5) according to the procedure described in the service manual.
- Install the following items as described in the service manual:
 - Rear drive belt
 - Sprocket cover
 - Rear exhaust pipe and rear muffler
- 4. Align rear wheel and adjust belt tension as described in the service manual.

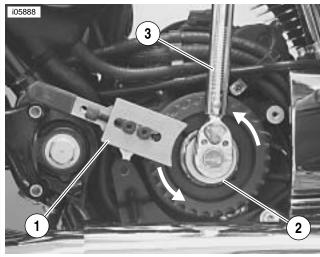

- 1. Transmission sprocket holding tool (HD-46282)
- 2. Mainshaft locknut wrench (HD-46288)
- 3. Torque wrench

Figure 6. Installing Transmission Locknut

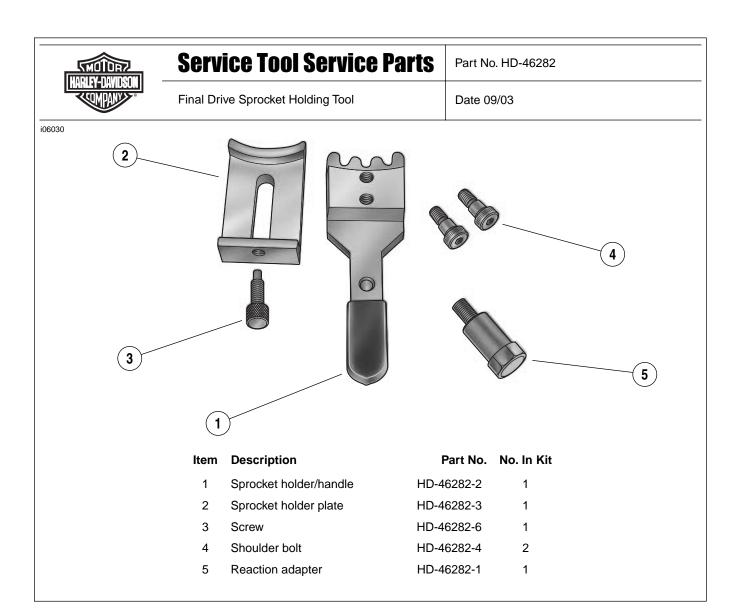

-J03049 4 of 4