SERVICE BULLETIN

December 5, 1986



HERITAGE SOFTAIL SPECIAL, PRE-DELIVERY AND SET-UP

This Service Bulletin describes Pre-delivery and Set-up instructions unique to the FLST Special; a mid-year model introduction.

BATTERY SERVICE

Remove the seat.

M-939

- 2. Remove one of the bolts securing the seat strap.
- 3. Service the battery as outlined in the Pre-delivery and Set-Up Manual, Part Number 99947-87.
- Install the seat with the strap over the seat. Install the bolt that secures the strap.

WINDSHIELD INSTALLATION

The windshield and mounting hardware come with the motorcycle as a kit and must be installed. The windshield is available as a kit, part no. 58450-87. The mounting hardware can also be ordered as a kit, part no. 58060-87.

NOTE

Windshield kit and Hardware kit are purchased separately.

Windshield kit is fully assembled.

Hardware kit consists of:

PART NO.	NAME					
4036	BOLT, 5/16-24x1 hex. hd. (Grade 5 Steel)					
3960W	BOLT, 5/16-24x1-1/2 hex. hd. (Grade 5 Steel)					
7041	WASHER, 11/32x1-1/32x1/8					
6645	LOCKWASHER, 5/16					

- Remove the two top bolts on the fork cover and discard.
- 2. See Figure 1. Slide the windshield brackets over the outside of the passing lamp brackets..

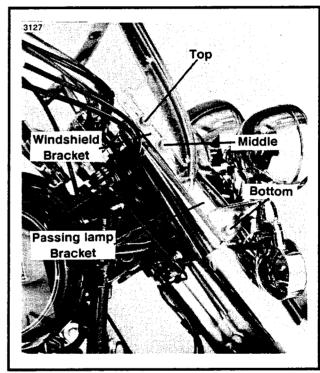


Figure 1. Windshield Mounting
NOTE

The bottom bolts do not have to be removed or loosened.

- Install the 5/16×1-1/2 in. bolts, with lockwashers and washers in the top holes.
- Install the 5/16×1 in. bolts, with lockwashers and washers in the middle holes.
- 5. Adjust the windshield height to suit the customer and tighten the bolts to 19 ft-lbs torque.

ROUTING:	SERVICE MANAGER	SALES MANAGER	PARTS MANAGER	CHIEF MECHANIC	MECHANIC NO. 2	MECHANIC NO. 3	MECHANIC NO. 4	RETURN THIS TO:
INITIAL HERE								