



INSTRUCTIONS

-J00171

REV. 2-1-93

Kit Number 49105-83 and 49109-93

XL PASSENGER FOOTREST KITS

General

These kits are designed for installation on 1983 and later XL model vehicles.

If this vehicle does not have a sissy bar installed on it, Passenger Grab Straps, Part No. 51189-83, must be installed on this vehicle.

QTY	DESCRIPTION
2	Footpeg
2	Mounting bracket
2	Socket head screw
2	Lockwasher
2	Hex head screw
2	Spring washer
2	Self-locking nut

Installation

1. Locate the existing footrest bracket hole on the rear fork, about three inches behind the pivot bolt.
2. Install mounting bracket with socket head screw and lockwasher. Tighten securely to 50 ft-lbs with the holes facing as shown in illustration.
3. Place spring washer inside on top of the lower hole of the mounting bracket.
4. Insert the footrest into the mounting bracket with the flat surface facing forward. Line up the holes with the bracket and spring washer.
5. Install the hex head screw downward and fasten self-locking nut underneath. Tighten to 24 ft-lbs.

NOTE

The footrest peg must fold upward and toward the rear at about a 45° angle when retracted. If it does not, remove peg and turn it over so the flat surface is facing forward. Retighten to 24 ft-lbs.

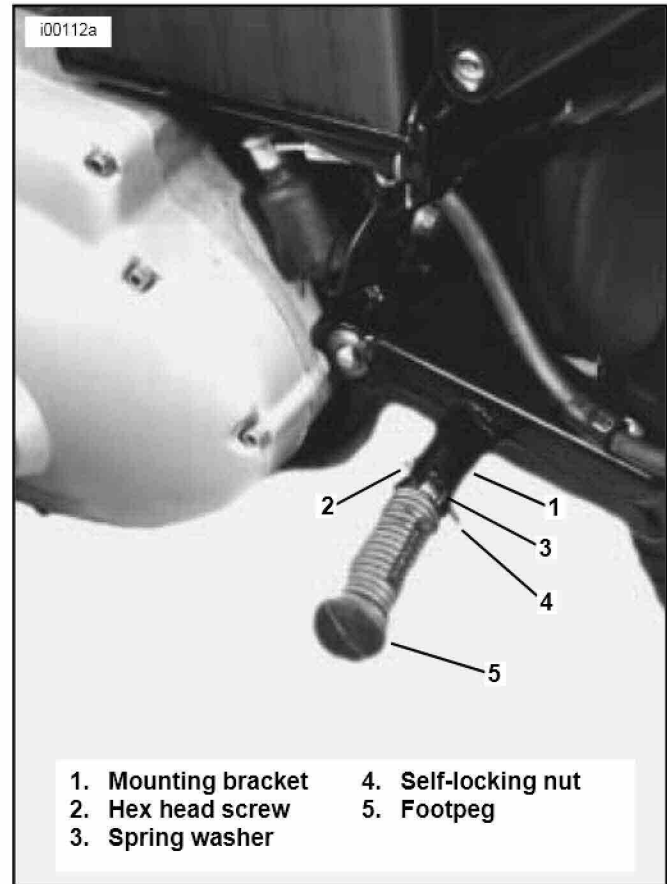


Figure 1. Footrest Assembly

6. Repeat Steps 1 - 5 for the remaining footrest.