



INSTRUCTIONS

-J00341

REV. 5-1-95

Kit Number 59241-95

XL FENDER STRUT COVER

General

This kit is designed for installation on 1990 - 1993 model Sportster® motorcycles.

QTY	DESCRIPTION	PART NO.
2	Screw, socket head (5/16-18 x 1-1/8 in.)	3895
2	Screw, socket head (5/16-18 x 1-1/2 in.)	94336-91TS
1	Fender strut cover, left	Not sold
1	Fender strut cover, right	Not sold

NOTE

The Service Parts for this kit have part no. listed above.

Installation

1. Refer to the "REAR FENDER" section in the Service Manual that covers motorcycle on which kit is being installed.

NOTE

It is recommended that you complete the strut cover installation on one side before beginning the other side.

2. Follow instructions given in Service Manual to remove rear directional lamp and socket head screws that secure fender to fender supports (struts).
3. See Illustration. Install right fender strut cover from kit. Reinstall rear directional lamp and install chrome screws from kit in locations shown.

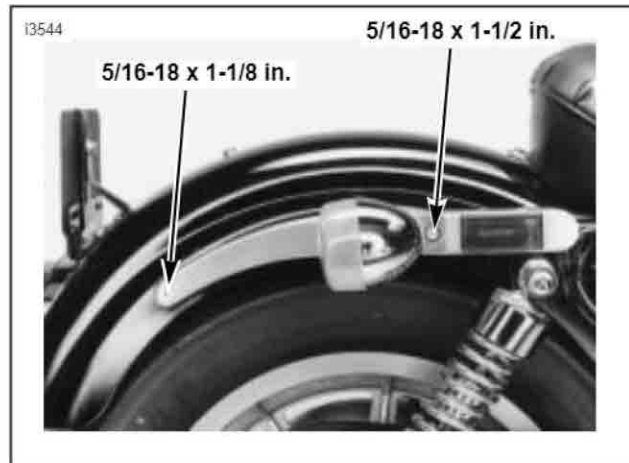


Illustration. Hardware Location

4. Repeat steps 2 and 3 for the other side.

⚠ WARNING

Before riding motorcycle, check that directional lights are operating properly. Never operate motorcycle with directional lights that are not operating properly. Directional lights that are inoperative or operating improperly could confuse other motorists, cause an accident and personal injury.