



# INSTRUCTIONS

-J00387

REV. 6-1-84

Kit Number 65203-84

## EXHAUST HEAT SHIELD KITS

### General

These instructions show how to install both 65203-84 (chrome) and 65205-84 (black) Exhaust Heat Shields on either pipes or mufflers.

#### NOTE

If you want to install this shield over a muffler, you will need different clamps - Harley-Davidson Part No. 10074 (2).

### MODELS SHIELDS FIT ON:

These shields can be installed on the following Harley-Davidson motorcycle models:

1970 and later XLCH, XLHA, XLH, XLS, XLX, FXEF, FXWG and FXDG motorcycles.

1980 and later FXSB, FXE, FX, FXE, FXB, FXS and FXEF motorcycles.

And 1982 and later FXR, FXRS, FXRT and FXST motorcycles.

### PARTS INCLUDED:

| QTY | DESCRIPTION                              |
|-----|--|
| 1   | Perforated Heat Shield - chrome or black |
| 2   | Worm drive clamps - 1 5/16 x 2 1/4 in.   |

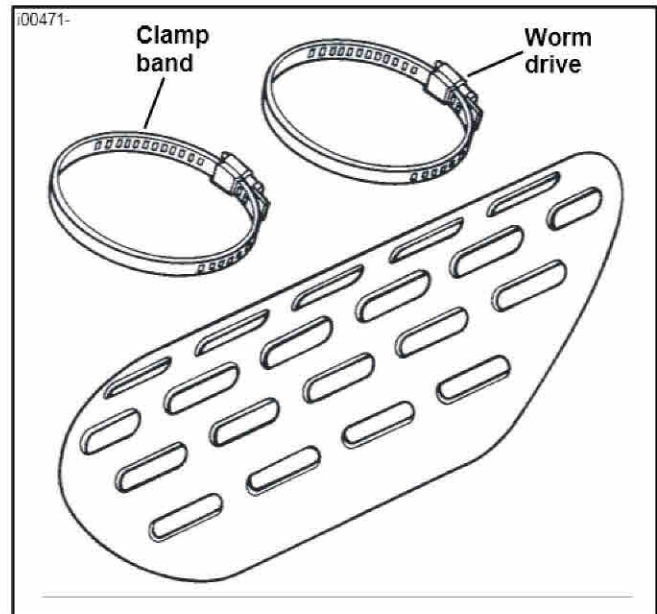


Figure 1. Clamps and Shield

### Installation

1. Turning worm drives to left, undo each clamp.
2. Insert each clamp band into the tabs on the underside of the shield.
3. Slip each clamp around pipe or muffler.
4. Insert each clamp band end into worm drive. Turn worm drive to right and tighten.