



INSTRUCTIONS

J00615

2009-12-11

COMPACT REPLACEMENT WINDSHIELD KITS

GENERAL

Kit Number

57201-05, 57717-01, 57718-01, 57719-08, 57720-08, 57762-10, 57763-10, 57812-04, 57815-04, 57912-04, 58061-96, 58103-96, 58264-03, 58265-03, 58271-95, 58288-95, 58358-96, 58368-96, 58625-99, 58629-99, 58632-99, 58750-05, 58774-08, 58777-05, 58804-96, 58805-96, 58916-98A, 58917-98A

Additional Parts Required

NOTE

A service manual for your year/model motorcycle is available from a Harley-Davidson dealer.

Kit Contents

See Figure 1 and Table 2.

INSTALLATION

1. See Figure 1. Remove windshield.
2. Remove all hardware that secures mounting brackets to windshield. The nine screws must be removed with a T-27 TORX® screwdriver. Save all hardware and brackets for installing new windshield.

NOTE

A hair dryer may be used to aid in tape removal from brackets. If original windshield does not use rubber washers, go to Step 5.

3. Remove all old tape from brackets and apply new tape (Items 1 and 2) from kit onto brackets. Align holes in tape with holes in brackets.

NOTE

Do not over tighten fasteners. Over tightening can crack the windshield.

4. Install rubber washers (4) between inner vertical brace and windshield.

5. Install all brackets. Tighten all screws and acorn nuts to 5.4–6.8 N·m (48–60 in-lbs).
6. Install windshield (3) on motorcycle.

Models

Table 1. Models

Kits	Models	Fits Accessory Kit:
57201-05	Smoked, low profile	57199-05
57717-01	Smoked, standard height	57715-01
57718-01	Clear, standard height	57716-01
57719-08	Clear, standard height	57701-08
57720-08	Smoked, low profile	57702-08
57762-10	Standard, clear	58053-10
57763-10	Smoked, low profile	57682-10
57812-04	Clear with flames	57810-04
57815-04	Clear with flames	57813-04
57912-04	Clear with flames	57898-04
58061-96	Clear, standard height	58001-71E, 58006-87C, 58034-96, 58112-96,
58103-96	Smoked, low profile	58001-71E, 58006-87C 58034-96, 58112-96,
58264-03	Smoked, standard height	58865-03, 58880-03
58265-03	Clear, standard height	58865-03, 58880-03
58271-95	Smoked, low profile	58340-96, 58341-96
58288-95	Clear, standard height	58340-96, 58341-96
58358-96	Clear, standard height	58357-96, 58367-96
58368-96	Smoked, low profile	58357-96, 58367-96
58625-99	Smoked, standard height	58056-94A, 58626-99
58629-99	Smoked, standard height	58627-99
58632-99	Clear, standard height	58044-88B
58750-05	Clear, standard height	59802-05
58774-08	Clear, standard height, cutout for auxiliary lamp	57605-08, 57609-08
58777-05	Smoked, standard height	58751-05
58804-96	Clear, standard height	58770-96, 58771-96
58805-96	Smoked, low profile	58770-96, 58771-96
58916-98A	Clear, standard height	58059-93A
58917-98A	Clear, standard height	58025-91B

NOTICE

Do not exceed recommended torque when installing mounting screws. Damage to windshield can result. (00385a)

CARE AND CLEANING

NOTE

Sunlight reflections off of the inside curvature of a windshield can, at certain times of the day, cause extreme heat build-up on motorcycle instruments. Exercise care in parking. Park facing the sun, place an opaque object over the instruments, or adjust the windshield to avoid reflections.

NOTICE

Polycarbonate windscreens/windshields require proper attention and care to maintain. Failure to maintain polycarbonate properly can result in damage to the windscreen/windshield. (00483d)

NOTICE

Use only Harley-Davidson recommended products on Harley-Davidson windshields. Do not use harsh chemicals or rain sheeting products, which can cause windshield surface damage, such as dulling or hazing. (00231c)

Do not clean Lexan® polycarbonate in hot sun or high temperature. Powdered, abrasive or alkaline cleanser will damage the windshield. Never scrape the windshield with a razor blade or other sharp instruments because permanent damage will result.

NOTE

Covering the windshield with a clean, wet cloth for about 15 minutes before washing will make dried bug removal easier.

Harley-Davidson Windshield Water Repellent Treatment part number 99841-01 is approved for use on Harley-Davidson Lexan® windshields.

NOTICE

Do not use windshield bags with flamed windshields. Damage to graphics will occur. (00393f)

SERVICE PARTS

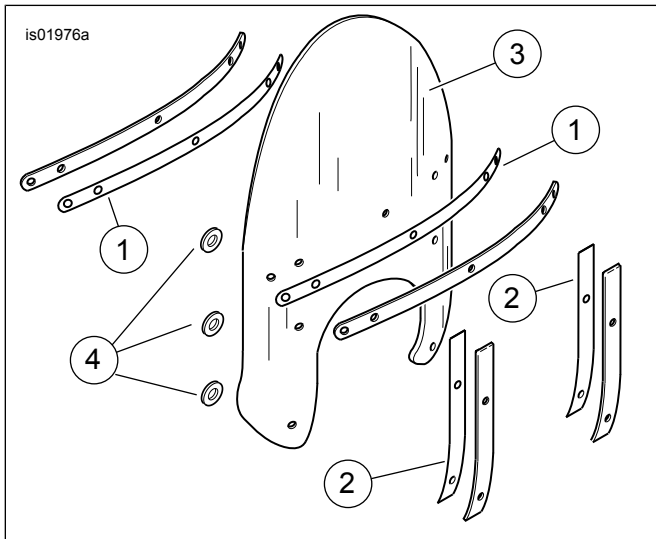


Figure 1. Service Parts: Compact Replacement Windshield Kits

Table 2. Service Parts

Item	Description (Quantity)	Part Number
All kits except 58774-08:		
1	Tape for horizontal brace (2)	58052-78
2	Tape for vertical brace (2)	58417-77
3	Windshield	Not sold separately
4	Rubber washer (6)	58152-96
Kit 58774-08:		
1	Tape for horizontal brace (2)	58052-78
2	Tape for vertical brace (2)	58415-08

Table 2. Service Parts

Item	Description (Quantity)	Part Number
3	Windshield	Not sold separately
4	Rubber washer (6)	58152-96