



INSTRUCTIONS

-J00791

REV. 1-21-97

Kit Numbers 32560-96, 32561-96, and 32562-96

SPARK PLUG COVERS

General

The following spark plug covers are designed to fit both 5/8 in. spark plugs as well as 13/16 in. spark plugs using the rubber inserts included in this kit.

32560-96 Chrome with H-D Logo

32561-96 Satin Chrome with H-D Logo

32562-96 Chrome without Logo

There are no service parts in this kit.

Installation


WARNING

Never disconnect a spark plug cable with the engine running or a potentially fatal electric shock may be received from the ignition system.

CAUTION

When disconnecting each spark plug cable, always grasp and pull on the rubber boot at the end of the cable. Do not pull on the cable portion itself to avoid damaging the cable's carbon core.

1. Remove spark plug wires from spark plugs.
2. Depending on the size of the spark plug, place the proper rubber insert into each cover. For 5/8 in. plugs use the large insert, and for 13/16 in. plugs use the smaller insert.
3. Place each cover over each plug and reinstall plug wires securely.

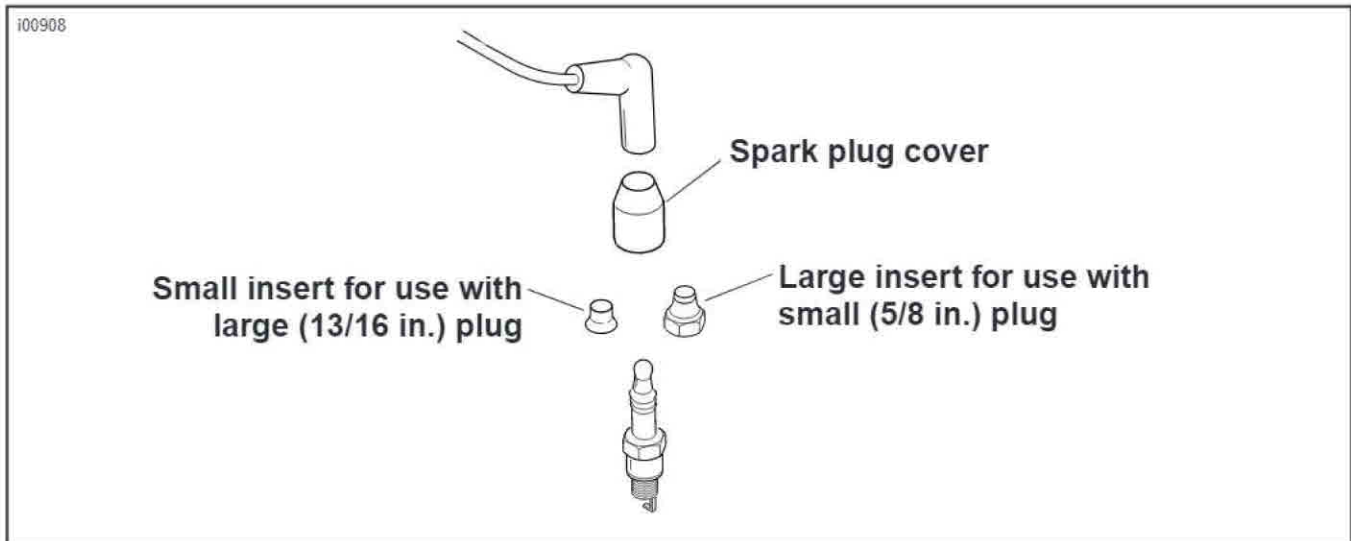

Spark Plug Covers