

**PART NUMBER**

58030-61

ORIG. 6-61

**INSTRUCTIONS**

HARLEY-DAVIDSON MOTOR CO., MILWAUKEE 1, WISCONSIN U. S. A.

Your Best Buy   
**GENUINE... HARLEY-DAVIDSON**  
**PARTS and ACCESSORIES**

## WINDSHIELD - SPORTSTER, K &amp; KH MODELS

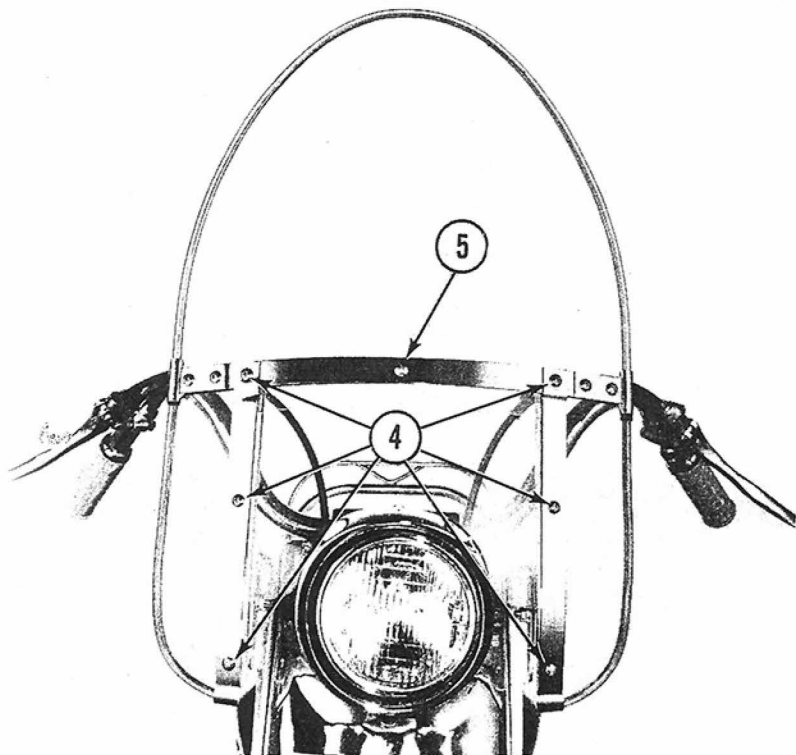


FIGURE 1

Remove headlamp housing screws from one side.

Attach windshield bracket (1) (See Figure 2). Use 1/2" long bolts, lockwashers and small washers (2).

Attach other side the same way.

Mount windshield to brackets, as shown in Figure 2, with remaining nuts, bolts and washers (3). Large flat washers go under bolt heads on outside of slotted brackets.

To install windshield window, loosen 3 Phillips screws in each vertical windshield brace (4) and remove center Phillips screw (5) in cross brace.

Adjust windshield to desired height by means of moving up or down in bracket slots.

NOTE: Window is scored at top. Excess above cross brace may be cut off if desired along one of score lines. To cut off, remove and cut with tin shears. Reinstall window.

Drill window through the center hole in brace and reinstall Phillips screw, nut and lockwasher (5). Tighten all Phillips screws.

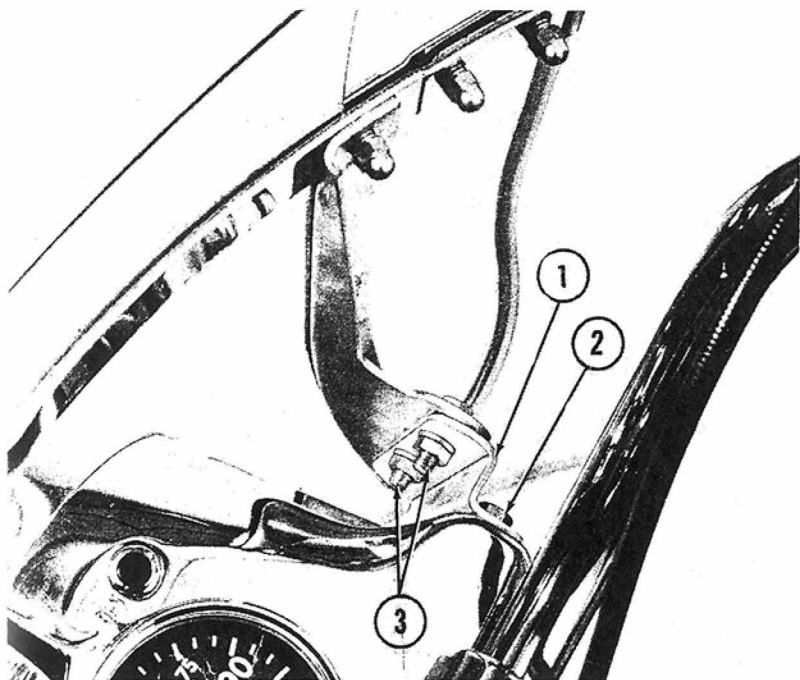


FIGURE 2