

# INSTRUCTIONS

-J00230 REV. 7-21-2004

Kit Numbers 52546-87, 52666-96, 52965-98 and 91770-85

## BACKREST PAD KITS

### General

- 52546-87 This kit is designed for use on 1987 and later FXLR model vehicles equipped with tall sissy bar uprights.
- 52666-96 This kit is designed for use on 1982 and later XL model vehicles equipped with tall sissy bar uprights.
- 52965-98 This kit is designed for use on all XL, FX, FXD, FXWG, FXST and FXR model vehicles equipped with tall sissy bar uprights.
- 91770-85 This kit is designed for use on all XL, FX, FXD, FXWG, FXST and FXR model vehicles equipped with tall sissy bar uprights.

#### NOTES

This backrest pad kit can be used with a Harley-Davidson miniluggage rack.

See the Service Parts Illustration on page two for a list of the items contained in this kit.

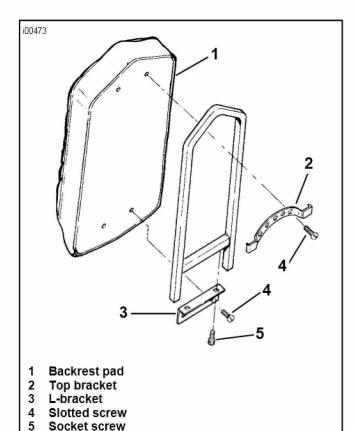


Figure 1. Backrest Assembly

#### Installation - BACKREST PAD KIT

- 1. See Figure 1. Tightly secure smaller side of bottom L-bracket (3) to sissy bar crossbar with socket screw (5).
- Tightly secure backrest pad (1) to larger side of bottom Lbracket (3) with slotted screws (4).
- Tightly secure top bracket (2) to backrest pad (1) and sissy bar with slotted screw(4).

# Installation- BACKREST PAD KIT WITH MINI-LUGGAGE RACK

- If mini-luggage rack is on vehicle prior to installation of backrest pad, remove mini-luggage rack from sissy bar and retain L-brackets and fasteners.
- See Figure 2. Position small side of bottom L-bracket (3) under sissy bar crossbar. Place mini-luggage rack under bottom L-bracket (3). Align holes and reinstall bolts removed from mini-luggage rack and sissy bar crossbar. Tighten bolts securely.

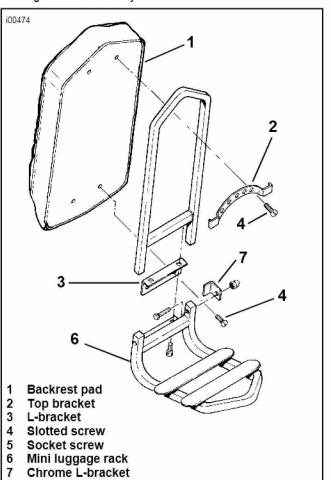


Figure 2. Backrest with Mini-Luggage Rack


#### NOTE

Coat threads of bolts securing mini-luggage rack and bottom L-bracket (3) to sissy bar crossbar with Loctite® 242 (blue).

- Install mini-luggage rack chrome L-bracket to sissy bar with bolts and acorn nuts (see mini- luggage rack instructions for L-bracket installation).
- Follow "Installation BACKREST PAD KIT," Steps 2 and 3 to complete installation.

## NOTE

The socket screws contained in the backrest pad kit cannot be used to fasten both mini-rack and backrest to sissy bar.

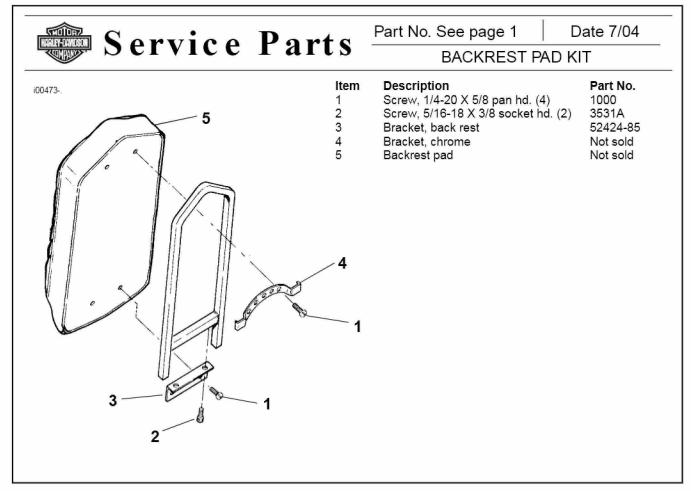

-J00230 2 of 2